



INSTALLATION GUIDE

# CEILING LINERS

**Welfit**<sup>™</sup>  
cargo liners



## Hardware

Welfit™ ceiling liners are designed to be precision-cut, ensuring accuracy and ease from the very first step. Before you begin, please read the entire installation guide once over, then check your hardware and tools to ensure you have everything needed to bring your cargo liner project to life. By following the detailed instructions outlined below, you should experience a smooth, straightforward installation process.

Because of the overhead position required we recommend a two-person install. Grab a friend, and let's get started!

### What You Need:



// Rubber mallet

### Included Hardware



// Tree clips

# CEILING LINER | INSTALLATION INSTRUCTIONS

## Ceiling Liners

// Before you begin, remove all existing OEM hardware that would impede a flush install. Collect your panels and lay them out in order of installation. Installation should be done from the front of the vehicle to the rear.

## Installation

1. Unfold the front ceiling panel and align to the contoured edge of the headliner, tucking the edge between the OEM headliner and sheet metal. Loosely push in the tree clips, checking that they align with the pre-drilled OEM ceiling holes. If they do not, you will need to drill your own holes (although that is a very unlikely scenario).
2. Then loosely install tree clips to hold the front of the liner in place, giving you flexibility when installing the other panel.
3. Next, attach the PVC transition channel with the rubber mallet. **Note: Not applicable to single panel kits.** Then proceed to the next panel following the previous steps.




4. Align and insert the last panel into the PVC transition channel, flexing around obstacles such as lighting. Loosely apply remaining tree clips and make any final adjustments to the ceiling liner for fit.

// **For extended ceilings with two panels:** Attach the provided transition piece to the front panel so that the smooth side faces down and loosely install hardware.

5. Once all liners are in place, use the rubber mallet to firmly seat all tree clips into their final position.



Your **Welfit** ceiling liners should now fit securely and be ready to provide you with **American Fleet Protection**.

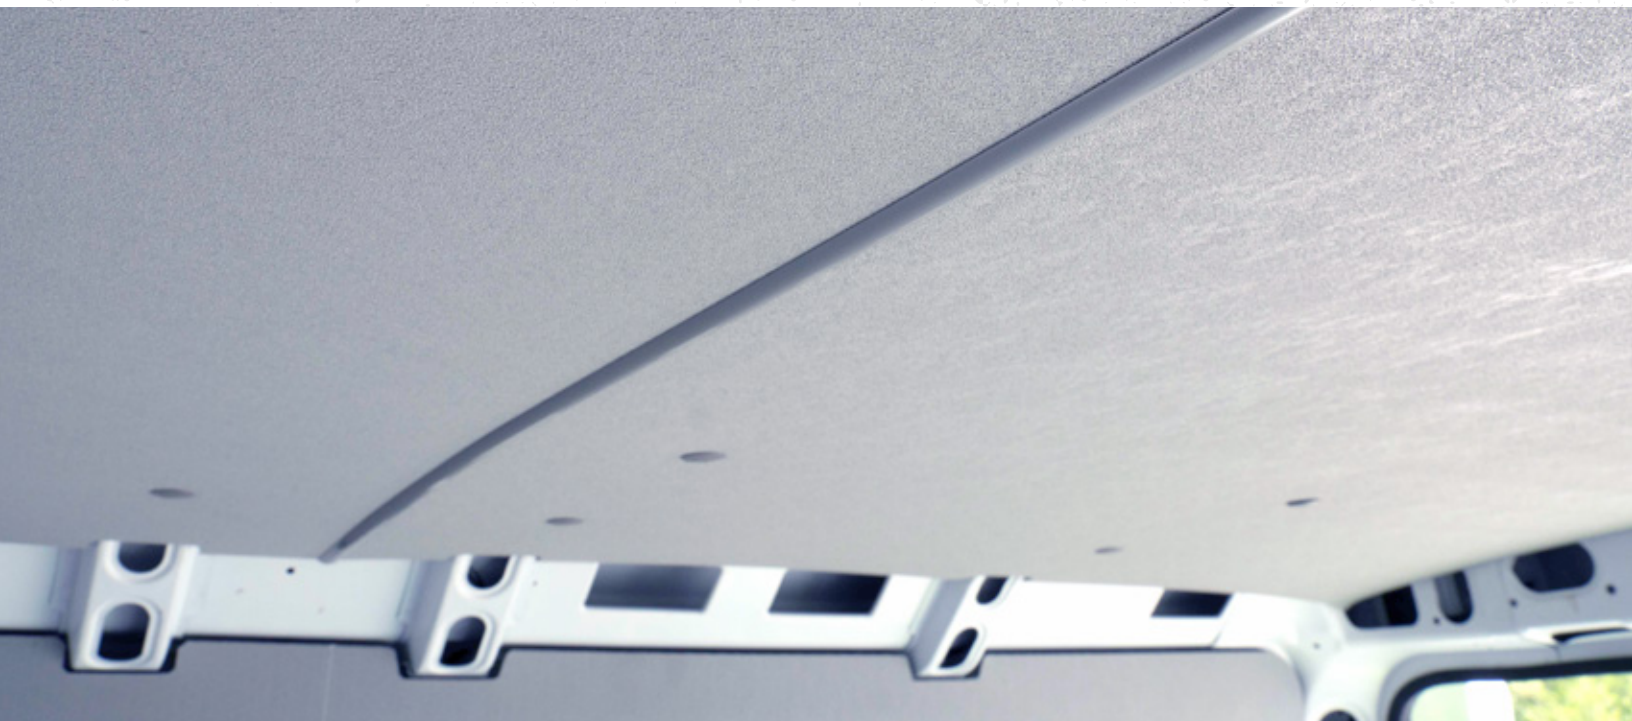



**Welfit**<sup>TM</sup>  
cargo liners

