

The background of the entire page is a technical line drawing of a truck chassis, showing various components like the frame, suspension, and wheels. This drawing is overlaid with a semi-transparent green filter. A dark grey rectangular box is positioned in the center of the page, containing the main title and logo.

INSTALLATION GUIDE

WHEEL WELLS & FLOOR LINERS


Welfit[™]
cargo liners



Hardware

Welfit™ wheel wells and flooring are designed to be precision-cut, ensuring accuracy and ease from the very first step. Before you begin, please check your hardware and tools to ensure you have everything needed to bring your cargo liner project to life. By following the detailed instructions outlined below, you should experience a smooth, straightforward installation process.

What You Need:

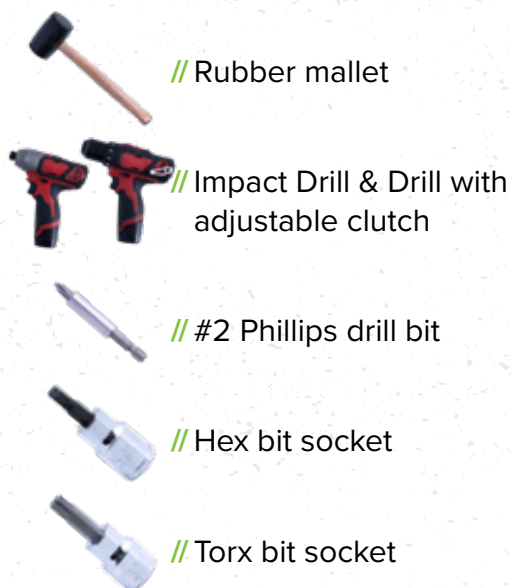

Included Hardware*



Wheel Well Liners

// If you've purchased wheel wells, they must be installed first.
If installing flooring only, please skip ahead to the flooring section.

Installation

1. Place the wheel well cover over the existing OEM wheel well.
2. You'll notice some holes that are pre-cut for push pins to be installed. If installing wall liners, wait to secure the tree clips until the wall liners are up.
3. If you will not be covering the walls, move on to installing the floor.



FLOORING LINER | INSTALLATION INSTRUCTIONS




Prep:

// If you've purchased wheel wells, make sure those are in place before starting on the flooring.

// Next, prep the floor by removing all OEM plastic trim, D-rings, tie-downs and any other parts present on the vehicle's floor.

Installation:

1. Starting in the front, lay the first panel down and align it to the contour of the vehicle's metal floor.
2. Install the H-channel aligning the non-mitered end with the driver side edge, leaving space for the J-channel at the side door. **For a proper fit, use the rubber mallet to tap the H-channel into place.**
3. Slide the next piece of flooring into the H-channel then tap it in with a rubber mallet. Repeat the process until 2 or 3 panels (dependent on chassis) are installed past the side door.

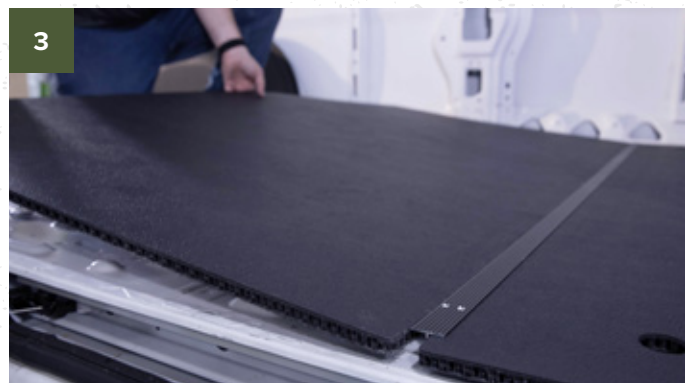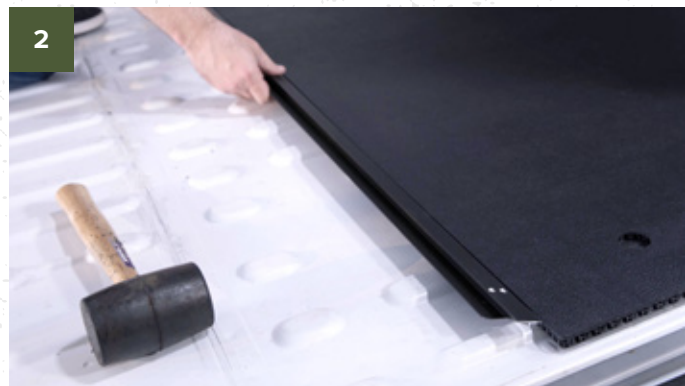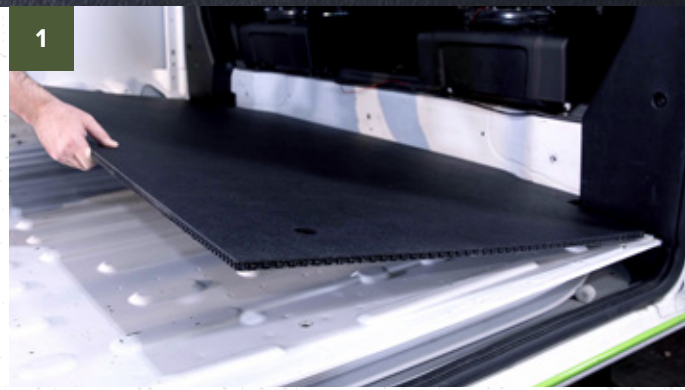

Installation Continued:

4. Tip up the first two panels to allow for installation of the J-channel and screws. Fully seat the J-channel with the rubber mallet and attach it to the floor panel using the drill and black finishing screws.
5. Slide and tap in the remaining floor panels and H-Channels except the rear floor panel.
6. Install the J-Channel to the back floor panel by tapping it into place. Then attach it to the flooring from the underside using the drill and screws. Finish by sliding in the back floor panel into the H-Channel and tapping it into place.
7. With all the panels in place make any minor adjustments to the position of the flooring.
NOTE: Some J-channels may come pre-installed and glued into place.
8. On the lowest torque setting, secure the flooring and H-channel with the drill and #2 Phillips head bit. Do not overtighten screws to avoid damage.



Wait to install hardware and reinstall d-rings until all flooring panels have been connected.

Your **Welfit** wheel wells and floor cargo liner should now fit securely and be ready to provide you with **American Fleet Protection.**





Welfit™

cargo liners

